






Greenstar 4000 with Sense I and MT20


FOR REPAIRS AND SERVICE

Avela Home Service: 0330 303 3000

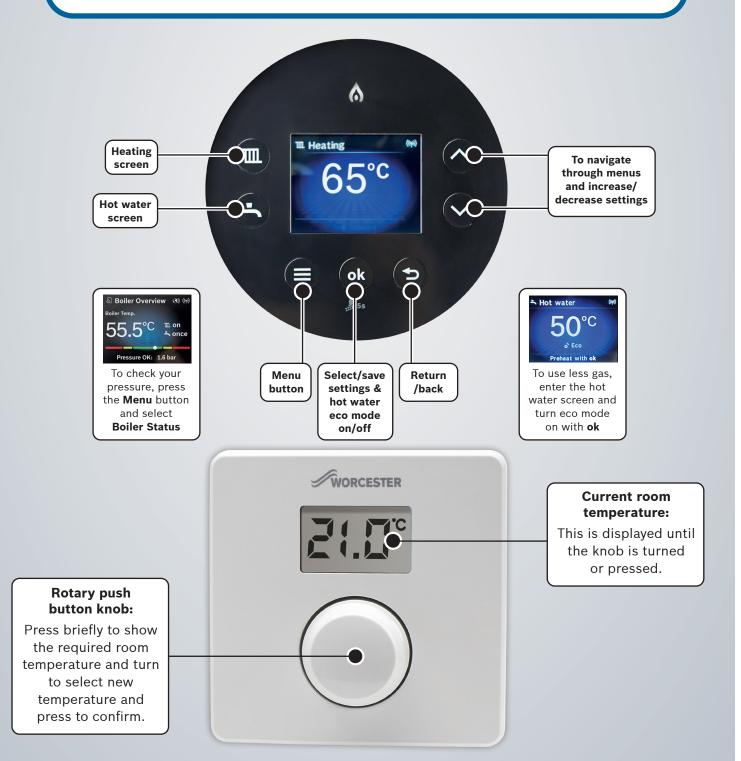






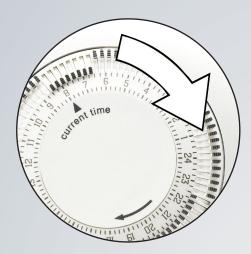

To set the clock, rotate the outer dial in the direction of the arrow until the pointer and clock hands show the correct time.

To set the timer, use the 'tappets' around the clock. Slide them inwards to set your central heating to ON, or slide them outwards to turn the boiler OFF.



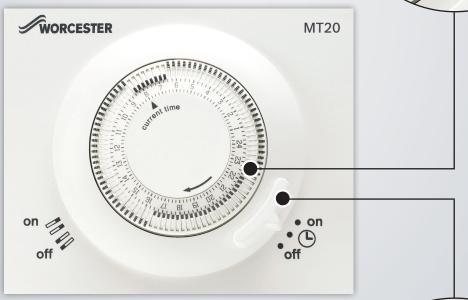

This switch determines whether the central heating is always OFF, always ON, or operating at the programmed times.

